## Coax Cutting and Cutter Adjustment

## Cut Depth Adjustment

- ☐ Step 1. Remove hex key from bottom of cutting tool and place the adjustment screws at the top as you look at the bottom of the cutting tool.
- ☐ Step 2. Adjusting left screw adjusts the first cut that is for the coax core wire. Adjusting right screw adjusts the second cat that is for the coax shield.
- ☐ Step 3. Adjust in ¼ turn increments until desired cut depth is obtained.

## **Videos**

- Excellent video on adjusting the cutter. https://www.youtube.com/watch?v=nAXt6Nj99Nw
- How to use a coax stripping tool. https://www.youtube.com/watch?v=fg79sLkDRLI
- How to Adjust a Coax Stripper for Quad-Shield Cable <a href="https://www.youtube.com/watch?v=fFysPMI1gSk">https://www.youtube.com/watch?v=fFysPMI1gSk</a>